


www.Roseburg.com

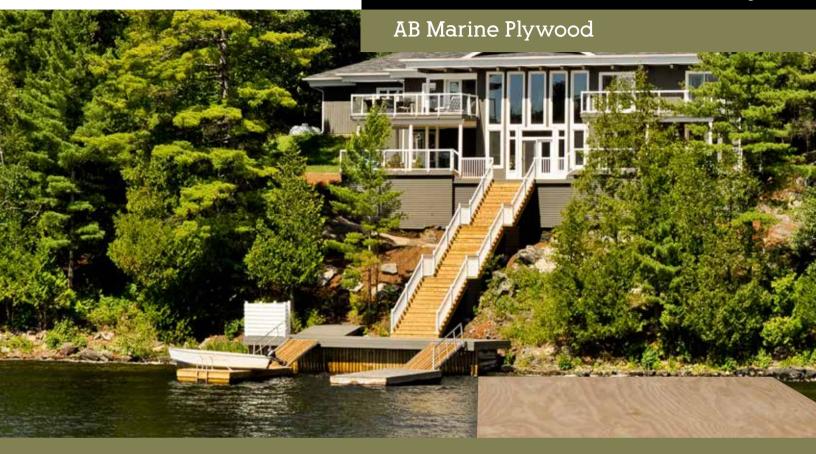

The Most Versatile Plywood Panel

Roseburg AB Marine plywood is an Industrial Grade panel that is perfect for use in greater moisture applications requiring a high quality face and back that is factory sanded and ready to further finish. It is built to Roseburg and APA – The Engineered Wood Association's industrial grade plywood standards for greater strength, durability and stiffness than standard plywood.

Environmental Stewardship

- Available FSC certified
- California CARB-ULEF exempt certification
- Can contribute to achieving LEED credits
- Exterior, fully water resistant phenolic adhesive









Decorative | Construction | Industrial
WODD PRODUCTS



AB Marine Sanded Plywood



Back



Specifications

Lengths: 8', 9', 10'

Widths: 4'

Thickness: 1/4", 3/8", 1/2", 5/8", 3/4", 1"

Face: A grade Douglas Fir Veneer

Overview

Roseburg AB Marine Plywood is an APA - The Engineered Wood Association PS 1 panel with an exterior exposure 1 rating. It is manufactured with a fully water resistant bonding adhesive and is designed for applications where high moisture conditions may be encountered during service.

Applications

- Storage Shelving cabinets
- Garage & carport shelving cabinets
- Home projects
- Commercial projects
- Countertop underlayment
- **Furniture**
- Cabinets
- Wooden toys

- Playhouses
- Platform for bed frame
- Overlay applications
- Outdoor signs
- Boat building
- **Docks**
- Fish house
- Boat house

Key Advantages

- Pre-sanded and paintable
- End Stamp: AB-EXT-PS 1-Marine-PTL-#
- No open defects on face
- Fully water resistant adhesive
- Minimal core gaps
- Dimensionally stable

Certifications

APA — The Engineered Wood Association

PS 1

Storage

Since Roseburg AB Marine is sanded, it is important to keep the material dry prior to use. Storage in a warehouse or under roof is recommended. If stored outdoors, units should be off the ground and covered loosely with some type of protective material.

Machining and Fastening

Roseburg AB Marine can be sawed, routed, shaped, and drilled. Always use sharp, high-speed tools. Because of the cross-layer construction, nails, screws, and other fasteners may be placed near the panel edge without splitting the panel.

Roseburg AB Marine should be securely fastened with 6d nails on 1/4", 3/8", 1/2" panels and with 8d nails on 5/8", 3/4" and 1" panels. Space nails 6" o.c. around all panel edges and 12" o.c. on intermediate supports. For soffit applications, all panel edges should be supported. Nails should penetrate at least one inch into the substrate material. Leave 1/8" gap between panel edges. Spiral or ring shank nails offer the best holding power. Screws and bolts can also be used.

For more information visit: http://roseburg.com/products/ APA Industrial Panel Selection Guide AR.pdf

Core Substrate: B grade or better western softwood

Back: B grade Douglas Fir

Adhesive: NAUF exterior, fully water resistant phenolic glue